

Open Tuna Panini 1 pce

		e2s	
		00:30	
		This recipe is available for: • eikon® e2s SP (1000W) • eikon® e2s HP (2000W) • eikon® e3 • eikon® e4 • eikon® e4s • eikon® e1s	
		Accessories: e1s/e2s Full Size Cooking Tray 32Z4080 (Black), 32Z4100 (Red), 32Z4093 (Green), 32Z4101 (Blue)	
P R 100 275 ℃	Stage 1		
Chilled 4°C	() 00:30		
l Piece	80 %		
Partially Cooked	الله 100 %		
Ingredients			
1 pcs Panini		1. Food Preparation Halve the bread and spread relish on base of bread. Place diced pepper on top of relish. Place	
	Pepper Relish	tuna on top of relish. Place cheese on top of tuna. Without tuna for Vegetarians. Place the bread open-face on the tray.	
	Pepper		
I 70 g Tuna 2 slice Chee	a tined	2. Cooking Instruction	
	n Herbs	Cook as per oven profile.	
P		3. Food Serving Instruction	
		Remove the cooked food from the tray and serve. Use the herbs for garnish after cooking.	

Note: Information emanating from Welbilt is given after exercise of all reasonable care and skills in its compilation, preparation and issue, but is provided without liability in its application and use. All cooking settings are guides only. Adjust cooking settings to allow for differing product weights and start temperatures. Always ensure that food save core temperature has been achieved prior to service.