


## Toasted Sandwich 1 pce

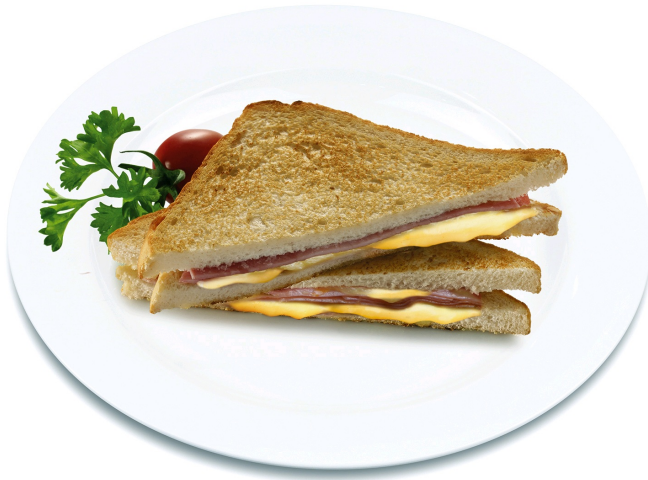

**eikon® e1s**

**01:00**

This recipe is available for:

- eikon® e3
- eikon® e2s SP (1000W)
- eikon® e2s HP (2000W)
- eikon® e4
- eikon® e4s
- eikon® e1s
- eikon® e5

Accessories:

e1s/e2s Non-stick Cooking Liner 32Z4088 (Natural), 32Z4096 (Green)

P  
R  
O  
F  
I  
L  
E

- 260 °C
- Chilled 4°C
- 1 Piece
- Partially Cooked

Stage 1

- 01:00
- 100 %
- 75 %

R  
E  
C  
I  
P  
E

### Ingredients

2 slice	White Bread
15 g	Butter
2 slice	Ham
1 slice	Cheese

### 1. Food Preparation

Place white bread slices side by side. Spread butter on white bread. Place ham on top of butter. Place cheese on top of ham and fold it to a Sandwich. Place the Sandwich on the liner.

### 2. Cooking Instruction

Cook as per oven profile.

### 3. Food Serving Instruction

Remove the cooked food from the liner and serve.