


## Chicken Breast without skin

### eikon® e2s

 02:00







This recipe is available for:

- eikon® e4
- eikon® e2s SP (1000W)
- eikon® e2s HP (2000W)
- eikon® e3
- eikon® e5
- eikon® e1s




Accessories:

e1s/e2s Full Size Cooking Tray 32Z4080 (Black), 32Z4100 (Red), 32Z4093 (Green), 32Z4101 (Blue)

P  
R  
O  
F  
I  
L  
E

-  275 °C
-  Chilled 4°C
-  1 Piece
-  From Raw

Stage 1

-  02:00
-  100 %
-  50 %

R  
E  
C  
I  
P  
E

Ingredients

140 g Chicken Breast

1. Food Preparation

Place it on the tray.

2. Cooking Instruction

Cook as per oven profile.

3. Food Serving Instruction

Remove the cooked food from the tray and serve.