Reheat Jacket Potatoes 2 pcs



e3

02:30

This recipe is available for:

- eikon® e4s
- eikon® e2s SP (1000W)
- eikon® e2s HP (2000W)
- eikon® e3
- eikon® e4
- eikon® e5
- eikon® e1s

Accessories:

e3 Flat Turn-table Plate 40H0347 e3 Non-stick Cooking Liner 40H0190

P R O F



275 °C



Chilled 4°C



2 Pieces



Precooked

Stage 1

01:15



Stage 2

Turn the Potatoes

Over

O1:15



. 100 %

Ingredients

2 pcs

Potatoes

1. Food Preparation
Place them on the liner.

Cooking InstructionCook as per oven profile.

3. Food Serving Instruction

Remove the cooked food from the liner and serve.