

Reheat Jacket Potatoes 2 pcs



eikon® e3

02:30

This recipe is available for:

- eikon® e4s
- eikon® e2s SP (1000W)
- eikon® e2s HP (2000W)
- eikon® e3
- eikon® e4
- eikon® e5
- eikon® e1s

Accessories:

- e3 Flat Turn-table Plate 40H0347
- e3 Non-stick Cooking Liner 40H0190

P
R
O
F
I
L
E

- 275 °C
- Chilled 4°C
- 2 Pieces
- Precooked

Stage 1

- 01:15
- High
- 100 %

Stage 2

Turn the Potatoes
Over

- 01:15
- High
- 100 %

R
E
C
I
P
E

Ingredients

2 pcs

Potatoes

1. Food Preparation

Place them on the liner.

2. Cooking Instruction

Cook as per oven profile.

3. Food Serving Instruction

Remove the cooked food from the liner and serve.