

## Crunchy Chik'n Burger 2 pcs



## e2s

**0**1:45

## This recipe is available for:

- eikon® e2s HP (2000W)
- eikon® e4

## Accessories:

e1s/e2s Full Size Cooking Tray 32Z4080 (Black), 32Z4100 (Red), 32Z4093 (Green), 32Z4101 (Blue)









Partially Fried

2 Pieces



Stage 1

₩ 40 %

**.** 100 %

Ingredients

270 g

Chik'n Burger

1. Food Preparation Place them on the tray.

2. Cooking Instruction Cook as per oven profile.

3. Food Serving Instruction Remove the cooked food from the tray and serve.