

Reheat Kachori



e1s

00:30

This recipe is available for:

- eikon® e2s HP (2000W)
- eikon® e1s

Accessories:

e1s/e2s Full Size Cooking Tray 32Z4080 (Black), 32Z4100 (Red), 32Z4093 (Green), 32Z4101 (Blue)



Stage 1



Chilled 4°C



1 Piece



Prefried

00:30



. 100 %



1 pcs

Kachori

1. Food Preparation Place it on the tray.

2. Cooking Instruction Cook as per oven profile.

3. Food Serving Instruction

Remove the cooked food from the tray and serve.