

www.merrychef.com

Teacake Halves







• eikon® e1s

Accessories:

- e3 Flat Turn-table Plate 40H0347
- e3 Non-stick Cooking Liner 40H0190

P R O F L E	 275 °C Ambient 2 Pieces Prebaked 	Stage 1 ③ 01:00 ※ High 	
R E C I P E	Ingredients 2-4 pcs Tea	acake Halves	 Food Preparation Lay out evenly on the liner. Cooking Instruction Cook as per oven profile. Food Serving Instruction

Remove the cooked food from the liner and serve.

Note: Information emanating from Welbilt is given after exercise of all reasonable care and skills in its compilation, preparation and issue, but is provided without liability in its application and use. All cooking settings are guides only. Adjust cooking settings to allow for differing product weights and start temperatures. Always ensure that food save core temperature has been achieved prior to service.