


Toasted Sandwich 1 pce

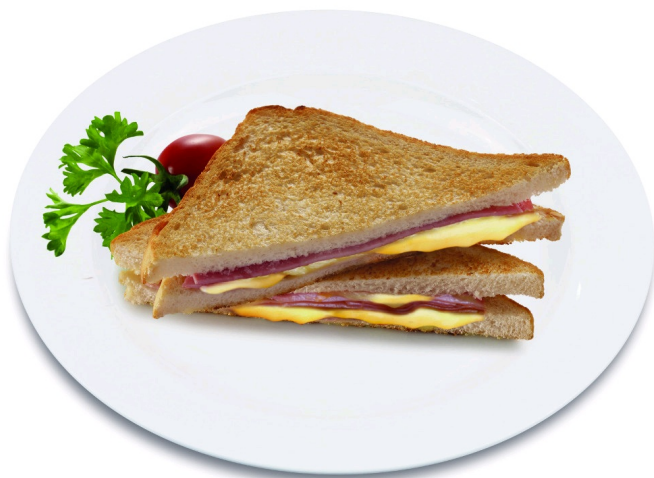

eikon® e3

02:30

This recipe is available for:

- eikon® e3
- eikon® e2s SP (1000W)
- eikon® e2s HP (2000W)
- eikon® e4
- eikon® e4s
- eikon® e1s
- eikon® e5

Accessories:

e3 Flat Turn-table Plate 40H0347
e3 Non-stick Cooking Liner 40H0190

PROFILE

- 275 °C
- Chilled 4°C
- 1 Piece
- Partially Cooked

Stage 1

- 02:30
- High
- 40 %

RECIPE

Ingredients

- | | | |
|----|-------|-------------|
| 2 | slice | White Bread |
| 15 | g | Butter |
| 2 | slice | Ham |
| 1 | slice | Cheese |

1. Food Preparation

Place white bread slices side by side. Spread butter on white bread. Place ham on top of butter. Place cheese on top of ham and fold it to a Sandwich. Place the Sandwich on the liner.

2. Cooking Instruction

Cook as per oven profile.

3. Food Serving Instruction

Remove the cooked food from the liner and serve.