

## Reheat Croissants



**eikon® e1s**

00:20

This recipe is available for:

- eikon® e4s
- eikon® e2s SP (1000W)
- eikon® e2s HP (2000W)
- eikon® e3
- eikon® e4
- eikon® e1s

Accessories:

e1s/e2s Full Size Cooking Tray 32Z4080 (Black),  
32Z4100 (Red), 32Z4093 (Green), 32Z4101 (Blue)

P  
R  
O  
F  
I  
L  
E

- 260 °C
- Ambient
- 1 Piece
- Prebaked

Stage 1

- 00:20
- 70 %
- 40 %

R  
E  
C  
I  
P  
E

Ingredients

1-3 pcs

Croissants

1. Food Preparation

Place them on the tray.

2. Cooking Instruction

Cook as per oven profile.

3. Food Serving Instruction

Remove the cooked food from the tray and serve.